


Honeywell

enviraire®

Programmable HEPA Air Cleaner with Remote Control

READ AND SAVE THESE INSTRUCTIONS
Install Pre-filter Before Use.

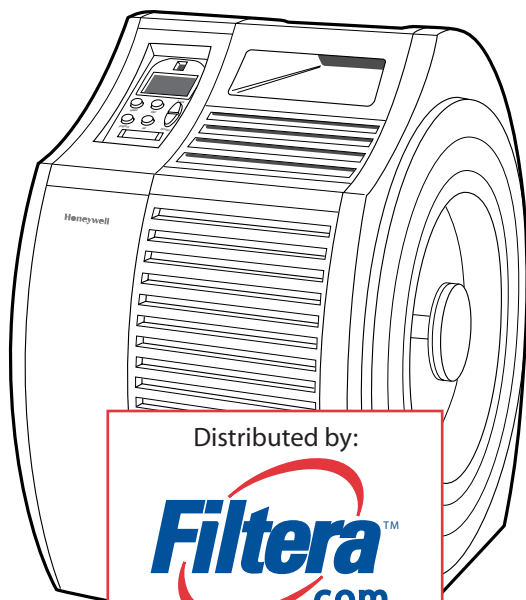

Distributed by:

Filtera[™]
.com

(888) 933-0100

M20123

Owner's Manual

For Model 17005 Air Cleaner

The Science of Clean Air®

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS AIR CLEANER

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before operating the air cleaner.
2. Place air cleaner where it is not easily knocked over by persons in the household.
3. Always turn the air cleaner to the **OFF** position and unplug from the wall outlet when not in use.
4. To disconnect the air cleaner, first turn control to the **OFF** position, grip the plug and pull it from the wall outlet. Never pull by the cord.
5. Do not use any product with a damaged cord or plug or if product malfunctions, is dropped or damaged in any manner. Keep the cord away from heated surfaces.
6. Do not use air cleaner outdoors.
7. Never use air cleaner unless it is fully assembled.
8. Do not run power cord under carpets, and do not cover with throw rugs. Arrange cord such that it will not be tripped over.
9. Do not use air cleaner where combustible gases or vapors are present.
10. Do not expose the air cleaner to rain, or use near water, in a bathroom, laundry area or other damp location.
11. The air cleaner must be used in its upright position.
12. Do not allow foreign objects to enter ventilation or exhaust opening as this may cause electric shock or damage to the air cleaner. Do not block air outlets or intakes.
13. Locate air cleaner near the outlet and avoid using an extension cord.
14. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.
15. A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
16. Do not sit, stand or place heavy objects on the air cleaner.
17. Disconnect power supply before servicing.

WARNING: To Reduce The Risk of Fire or Electric Shock, Do Not Use This Air Cleaner With Any Solid-State Speed Control Device.

CAUTION: The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not recharge, disassemble, heat above 100° C (212°F), or incinerate. Replace battery with Panasonic CR 2032, 3V only. Use of another battery may present a risk of fire or explosion.

Congratulations

You now own a quality portable HEPA air cleaner that has been engineered and crafted for your satisfaction.

Our Consumer Relations representatives will be pleased to help with any questions or concerns you may have about your air cleaner. Please call our Consumer Relations Dept. at (800) 332-1110 for assistance, or e-mail us at service@honeywell.com.

 

For Best Performance

Indoor air can be quickly contaminated by activity in a room, infiltration of outside air, and from sources of contamination. Therefore, it is generally recommended that you operate your air cleaner 24 hours a day. However, this unit is equipped with convenient, energy-saving programmable controls which will allow you to preset the air cleaner to shut off when you are away and turn on when you generally use the room, thus minimizing energy costs. For best performance, set the air cleaner to turn on about an hour or so before you will use a room.

This air cleaner discharges filtered air upwards into the room, allowing the unit to be placed on the floor in almost any location. While all the air in a room will not be processed by the air cleaner, the more air circulated through the filter, the more filtered air returned to the room. Portable air cleaners will be much more effective in rooms where all doors and windows are closed.

NOTE: Due to the large volume of air drawn towards the air cleaner, surrounding areas should be cleaned and/or vacuumed more frequently to prevent dust build-up. If the unit is placed on light colored carpeting, a small mat or rug should be used to ease cleaning and prevent permanent staining of carpeting. This is particularly important in homes with heavy contamination from smoking or fireplaces.


Construction

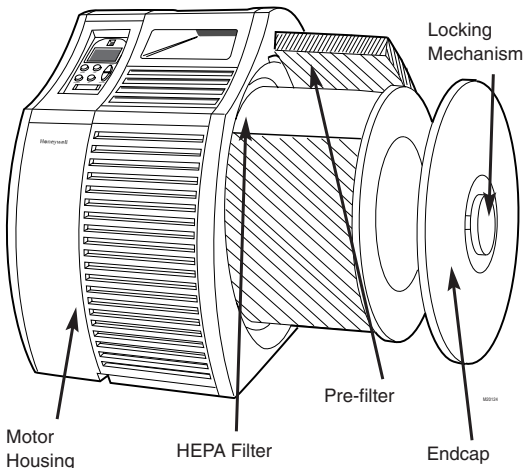

Remote Control

Programmable Control Features

Fig. 1

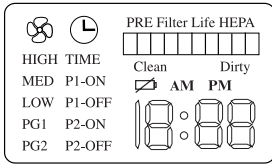


Your programmable control features include (Fig. 1):

- Manual control or automatic programmed operation
- 3 Speed settings
- Customize set program times
- Clock
- Intelli-Check™ Pre-filter life monitor bar
- Intelli-Check™ HEPA filter life monitor bar
- Filter reset function
- Low battery indicator

Set-Up

- **CONNECT THE BATTERY.** The programmable controls and real time clock are battery backed. Upon initial set-up, pull the protective film from the battery door so the battery will make contact and function (Fig. 2). This battery allows you to temporarily unplug your air cleaner without losing program settings.
- **INSTALL PRE-FILTER BEFORE USE.** Locate the initial pre-filter in the packaging. Refer to the "How to Install and Replace the Filters" section for proper installation.
- **SET CURRENT TIME.** Plug unit in outlet.

Fig. 2

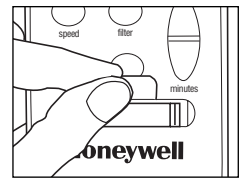

NOTE: The air cleaner cannot be programmed unless it is plugged into the outlet. Hold SET button down for approximately 3 seconds. The clock icon and word TIME will appear. You may adjust the hours using the up button and adjust the minutes using the down button. After the current time is set, repeatedly press SET button until (🕒) disappears.

Manual Operation

The default program setting upon initial start-up is Manual Operation.

- To go from Automatic Operation to Manual Operation press the PROGRAM button until both PG1 and PG2 disappear.
- To change the speeds in Manual Operation mode press the SPEED button to select the desired setting.
- The SPEED button will move through HIGH, MED, LOW, and OFF as noted on the display, and will function independent of programmed settings.

Pre-Set Program Cycle

To run one pre-set program cycle in a 24 hour period (PG1).

PG1 Pre-Setting to run Program One

P1-ON 4 PM HIGH SPEED

P1-OFF 8 AM

To activate pre-set PG1, Press the PROGRAM button once. PG1 will be displayed.

Your machine is now programmed to run from 4pm to 8am on HIGH (Fig. 3a, 3b).

Fig. 3a


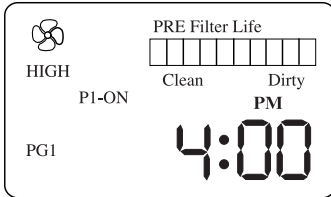


Fig. 3b

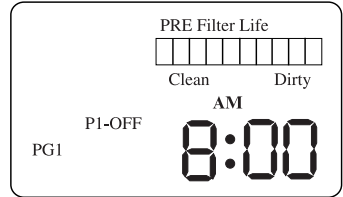

Customize Program Cycles

NOTE: The air cleaner cannot be programmed unless it is plugged into the outlet.

To SET program points:

Press the SET button and hold for 3 seconds to activate time function. The SET button will move through these programming functions:

Set (current) TIME.

Set PG1 cycle times P1-ON and P1-OFF.

Set PG2 cycle times P1-ON and P1-OFF, and P2-ON and P2-OFF.

Set EXIT mode and Run the clock.

To Customize the PG1 Program Settings to run **ONE ON/OFF Cycle** in a 24 hour period:

NOTE: You are unable to set the OFF time to be the same as the ON time.

- Press the SET button and hold for 3 seconds to activate time function. Move through programming functions by repeatedly pressing SET button until PG1 and P1-ON appear. The clock and program speed icons will appear (Fig. 4a).
- Adjust the time using the hours and minutes button (up for hours, down for minutes). This is the time that the machine will turn ON.
- Adjust the desired speed setting using the SPEED button.
- Press the SET button until PG1 and P1-OFF appear. The speed icon will disappear (Fig. 4b).
- Adjust the time using the hours and minutes button. This is the time that the machine will turn OFF.
- Repeatedly press SET button until (⌚) disappears.
- Press the PROGRAM button until PG1 appears. Unit will automatically operate per your settings.

Fig. 4a


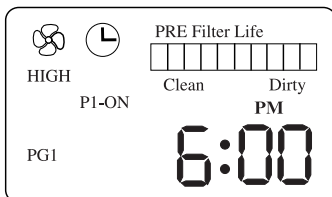


Fig. 4b

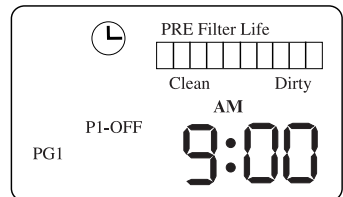

Customize Program Cycles (Cont'd)

To run **TWO** customized ON/OFF cycles in a 24 hour period (PG2):

NOTE: You are unable to set the OFF time to be the same as the ON time. The P2-ON time must be set for after the P1-OFF time.

- Press the SET Button and hold for 3 seconds to activate the time function. Move through programming functions until PG2 and P1-ON appear. The clock and program speed icons will appear (Fig. 5a).
- Adjust the time using the hours and minutes button (up for hours, down for minutes). This is the time that the machine will turn ON for the first ON/OFF cycle.
- Adjust the desired speed setting using the SPEED button.
- Press the SET button until PG2 and P1-OFF appear. The speed icon will disappear (Fig. 5b).
- Adjust the time using the hours and minutes button. This is the time that the machine will turn OFF for the first ON/OFF cycle.
- Press the SET button until PG2 and P2-ON appear. The speed icon will appear (Fig. 5c).
- Adjust the time using the hours and minutes button. This is the time that the machine will turn ON for the second ON/OFF cycle.
- Adjust the desired speed setting using the SPEED button.
- Press the SET button until PG2 and P2-OFF appear. The speed icon will disappear (Fig. 5d).
- Adjust the time using the hours and minutes button. This is the time that the machine will turn OFF for the second ON/OFF cycle.
- Continuously press SET button until you exit set time mode.
- Press the PROGRAM button until PG2 appears. Unit will automatically operate per your settings.

NOTE: When a program function is running (pre-set or customized program cycles), you may override the speed setting; the unit will continue with its programmed function once it reaches the next programmed time.

Fig. 5a

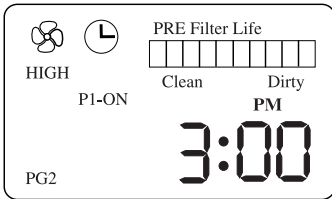


Fig. 5b

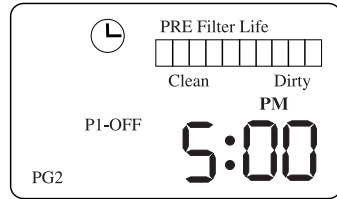


Fig. 5c


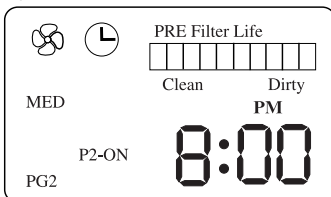


Fig. 5d

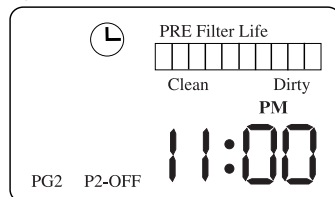

Remote Control

This air cleaner features a remote control handset for additional convenience. The remote control allows you to turn the air cleaner OFF and to change the running speed (LOW, MED, HIGH). **NOTE:** When a program function is running (pre-set or customized program cycles), you may override the speed setting; the unit will continue with its programmed function once it reaches the next programmed time.

Replacement Filters

HEPA Filter
Part Number

20500

Carbon Pre-filter
Part Number

38002

Replacement filters may be purchased from the retail outlet where you purchased the product. If you cannot locate one in your area, please call our Consumer Relations Dept. at (800) 332-1110 for assistance, e-mail us at service@honeywell.com or visit us at www.honeywell.com/yourhome.

Filter Replacement Intervals

CAUTION: Do not attempt to wash either the activated carbon pre-filter or the HEPA filter. They are not washable and washing will damage the filters.

With proper maintenance, your air cleaner is designed to provide years of high efficiency air cleaning. Our recommendations regarding filter replacement intervals are intended as guidelines only, as life expectancy of any filter media is dependent on the concentration of the contaminants to which the system is exposed. If there are sources of large amounts of contaminant generation (such as dust from woodworking or heavy smoking) the useful life of the filter media in your air cleaner may be reduced and require early replacement.

The primary HEPA filter should remain effective for 1 to 3 years, depending upon the environment in which the air cleaner is operating. Honeywell recommends changing the HEPA filter based upon operation conditions—every 3 years for light usage, 2 years for normal usage and 1 year for heavy usage.

The activated carbon pre-filter helps protect the HEPA filter by capturing lint and other large particles, and helps reduce normal household odors. It should be checked monthly and replaced at least every 3 months. If there are heavy concentrations of odors, smoke, or large particles in the home, you may need to change the pre-filter more often. We **DO NOT** recommend operating the air cleaner without the activated carbon pre-filter or without following the filter replacement guidelines.

Whenever the air resistance of the HEPA filter becomes excessive due to the amount of contaminants it has captured, the air volume output will begin to reduce and the sound level of the air cleaner will increase.

Intelli-Check™ Filter Monitors

This air cleaner is equipped with Intelli-Check Filter™ Monitors to serve as a convenient guideline for replacement of the pre-filter and HEPA filter based on the air cleaner's hours of use and operating speed. This is beneficial because a filter's life depends on the amount of air and contaminants drawn through it. Each filter bar will fill up from clean to dirty as its expected filter life is used up. Once the bar is completely full, it is time to check / replace the filter.

- To move between the PRE-FILTER bar and the HEPA FILTER bar, quickly press the FILTER button (Fig. 6a).
- To RESET a filter bar that appears on the display, press and hold the FILTER button for 5 seconds, or until the filter bar clears to CLEAN status (Fig. 6b).

The Intelli-Check™ Filter Monitors calculate the expected filter life based on an assumed average operating time of 12 hours a day on medium speed. Therefore, it will indicate replacement of the Pre-filter in about 3 months, and the HEPA filter in about 1 year and 9 months. Depending upon your individual usage (environment, hours and speed of operation), you may need to check and replace the filters more or less frequently.

Fig. 6a


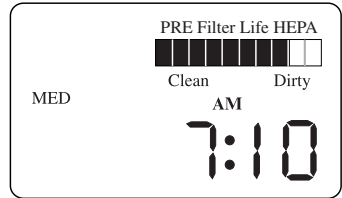


Fig. 6b

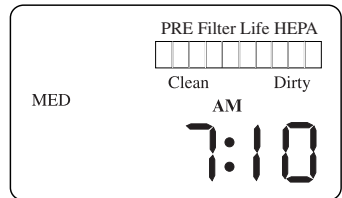

How to Install and Replace the Filters

INSTALL PRE-FILTER BEFORE INITIAL OPERATION. The initial pre-filter is packaged separately to ensure its freshness. BEFORE initial operation, locate the pre-filter in the package and install per the instructions (Refer to Page 2 "Construction" section).

DISCONNECT FROM POWER SUPPLY BEFORE SERVICING.

1. Unscrew locking mechanism counter-clockwise (Fig. 7).
2. Remove Endcap and remove filter assembly from unit (Fig. 8).
3. Undo fastener(s) and remove pre-filter.
4. As needed, replace HEPA Filter (there is no orientation to filter).
5. As needed, install new pre-filter by securing it around HEPA filter with the fastener(s) provided (Fig. 9).
6. Replace endcap.
7. Insert and tighten locking mechanism clockwise.
8. Discard used filter(s).
9. Plug in and RESET appropriate filter monitor(s) per instructions below.

Fig. 7

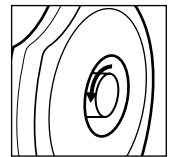


Fig. 8


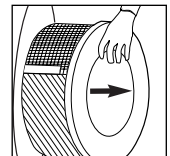


Fig. 9

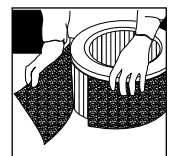

- Press FILTER button until the PRE-FILTER or HEPA FILTER monitor you wish to reset appears on the display.
- Press and hold for 5 seconds, or until the filter bar clears fully to CLEAN status.

Battery Replacement

Remote control handset: Two 1.5V AAA size batteries. Replace as needed.


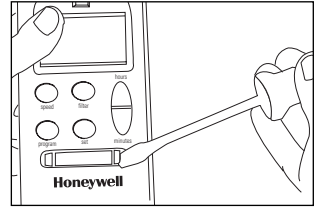
Control Panel Battery backup: Replace battery with Panasonic CR 2032, 3V only. Use of another battery may present a risk of fire or explosion. Replace when Battery Low icon appears on viewing screen (). Keep unit plugged in while replacing battery to prevent loss of customized programs. To replace battery, locate battery door on control panel. Use a flat head screwdriver to gently pry up both ends of the battery door (Fig. 10). Carefully remove battery holder from unit. Make sure that the (+) sign on the battery is facing up in the battery holder before returning the new battery to the unit. Dispose of used battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire.

Fig. 10



Storage

If you store your **Honeywell** HEPA air cleaner for more than 30 days, we recommend:

- Removing both the primary HEPA filter and the activated carbon pre-filter from the unit.
- Discarding the pre-filter.
- Wrapping the HEPA filter in an air-tight plastic bag or plastic wrap. Be sure that the filter is totally sealed.
- Remove and store batteries. Keep batteries away from children. **NOTE:** Removing control panel battery will erase customized programs and times.

To restore the air cleaner to service, unwrap the HEPA filter, install a new activated carbon pre-filter, reinstall both filters in the air cleaner and reinstall batteries. See "How to Replace the Filters", and "Battery Replacement" section for proper installation.

Troubleshooting

- For optimum performance, start on HIGH for a few minutes, then adjust to desired speed.
- This product may emit a "new" smell which will disappear over a relatively short period of operation.
- Check to make sure that the power cord is correctly connected to the outlet. **Note:** The unit can not be programmed unless it is plugged into the outlet.
- Test that the outlet is functioning properly using another appliance or lamp.
- Check the fuse or circuit breaker. The outlet may be overloaded if other appliances are also in use. Determine and correct the cause of the overload.
- If none of the above procedures restore operation, call Honeywell at (800) 332-1110 or e-mail us at service@honeywell.com for technical assistance. If the problem can not be resolved, see warranty terms and conditions in this owner's manual. Do not attempt to repair the unit yourself, as it may cause injury, and the warranty does not cover damage resulting from unauthorized attempts to repair or from any use not in accordance with this manual.

5 Year Limited Warranty

Honeywell HEPA Air Cleaners Model No. 17005

This product has been engineered and crafted with great care for your satisfaction. Be sure to fill out and return the enclosed card within 10 days of purchase.

A. This limited warranty applies to repair or replacement of product found to be defective in material or workmanship within 5 years of the date of purchase. This warranty does not apply to damage resulting from commercial, abusive, unreasonable use or supplemental damage. Defects that are the result of normal wear and tear will not be considered manufacturing defects under this warranty. HONEYWELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE. ANY IMPLIED WARRANTY, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY. Some regions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights which vary from region to region. **This warranty applies only to the original Purchaser of this product.**

B. At its option, Honeywell will repair or replace this product if it is found to be defective in material or workmanship within the limited warranty period. Defective product should be returned to the place of purchase in accordance with store policy or to Honeywell.

C. This warranty does not cover damage resulting from unauthorized

attempts to repair or from any use not in accordance with this manual.

D. This warranty **DOES NOT** cover the pre-filter or the HEPA filter except for material or workmanship defects.

E. Return defective product to the following address with a brief description of the problem. Include proof-of-purchase and a U.S. \$10.00/ Canadian \$15.00 check or money order for handling, return packing and shipping charges. Please include your name, address and daytime phone number. You must prepay shipping charges. Mark carton "**Attention Returns Department!**"

Ship to:

In USA:

Honeywell
Returns Department
4755 Southpoint Drive
Memphis, TN 38118 U.S.A.

In Canada:

Honeywell
510 Bronte St. South
Milton, Ontario Canada L9T 2X6

If you experience a problem with your Air Cleaner, please see owner's guide for instructions. Please do not attempt to repair the air cleaner yourself. Doing so may void the warranty and could cause damage or personal injury. If the problem still persists, please call:

Honeywell
Consumer Relations Dept.
service@honeywell.com
Toll Free 1-800-332-1110.

Mail Questions or Comments to:

Honeywell
Consumer Relations Dept.
250 Turnpike Road
Southborough, MA 01772
U.S.A.

Visit our website at

www.honeywell.com/yourhome