

Particulate Respirators 8210 and 8110S, N95

Issue Date 01/01/04

The 3M™ Particulate Respirator 8210, N95 is designed to help provide quality, reliable worker protection against certain non-oil based particles. The 3M™ Particulate Respirator 8110S, N95 offers the same protection for those workers with smaller faces. The 8210 and the 8110S offer a number of benefits to you and your workers.

NIOSH approved N95

- At least 95% filtration efficiency against solid and liquid aerosols that do not contain oil.* TC-84A-0007

Advanced Electret Media

- Advanced electrostatically charged microfibers make breathing easier and cooler.

Helps provide worker protection


- Because they are comfortable to wear and easy to use, workers are quick to accept and use maintenance-free respirators, like the 8210 and 8110S. Studies have shown they can provide protection equivalent to a rubber facepiece respirator...at much lower cost and greater convenience.

Lightweight construction

- Promotes greater worker comfort.
- Contributes to increased wear time.

Adjustable noseclip

- Helps provide a custom fit and secure seal.
- Reduces the potential for eyewear fogging.

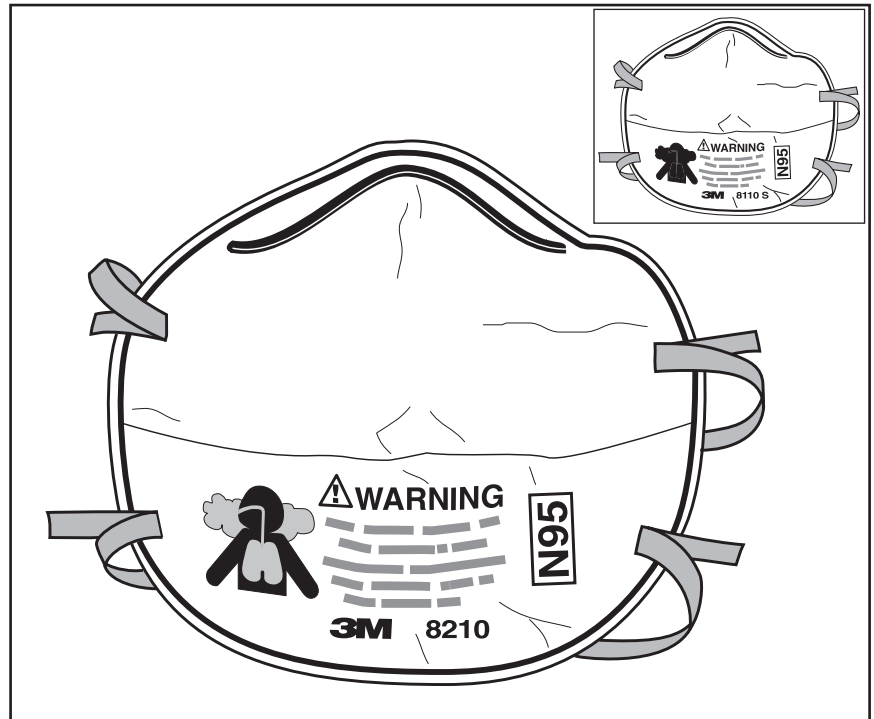


3M™ Particulate Respirator 8210, N95
(Inset photo: 3M™ Particulate Respirator 8110S, N95)

Suggested Applications



- Grinding
- Sanding
- Sweeping
- Bagging
- Other dusty operations
- Woodworking
- Foundries



WARNING

These respirators help reduce exposure to certain particles. **Misuse may result in sickness or death.** Before use, the wearer must read and understand **User Instructions** provided as a part of product packaging. Time use limitations may apply. For proper use, see package instructions, supervisor or call 3M OH&ESD Technical Service in U.S.A., 1-800-243-4630. In Canada, call 1-800-267-4414.

*Tested against particles approximately 0.3 micron in size (mass median aerodynamic diameter) per 42 CFR 84.

