




Filtera
12999 Murphy Road, Suite I-1
Stafford, Texas 77477-3948

281.933.1100 Phone
888.933.0100 Toll Free Phone
281.933.1159 Fax

www.Filtera.com
info@Filtera.com

Mini Pleat Filters (2-Inch & 4-Inch)

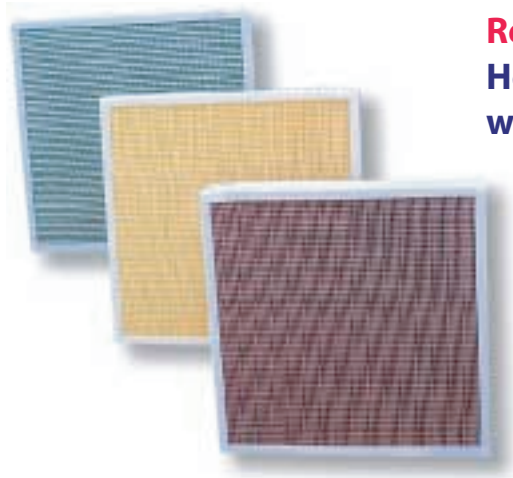


Revolutionary New Design
Helps you meet LEED Green Building Standards
without modifying your existing filter racks

Choose From Four Efficiencies:

MERV 14+	MERV 13
MERV 14	MERV 11

- **Manufactured in Europe**
- **100% synthetic materials**
- **Low pressure drop**
- **High efficiency**
- **Moisture resistant**
- **Long Service Life**

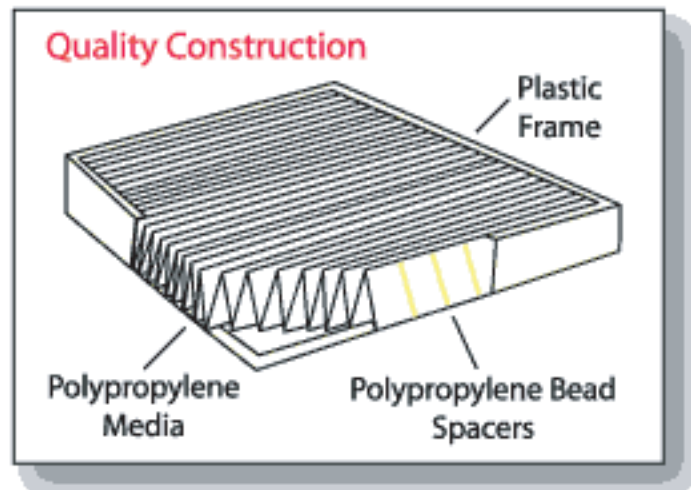

PRODUCT DESCRIPTION

Squeeze maximum filtration into a 2-inch or 4-inch filter track or frame with this Mini Pleat panel filter. This new mini pleat incorporates all of the best in filtration technology. At five times the media area as compared to a standard pleated panel filter, Mini Pleats last longer and offer higher efficiency. The media is a single web of gradient density fibers which achieves high dust holding, high efficiency and low pressure drop. The pleats are held rigid and evenly spaced to maintain even loading and air distribution. The entire filter is constructed of polypropylene which offers several advantages. One is that the filter does not support the growth of bacteria, fungi, or mold. Another benefit is that the filter will not corrode or degrade over an extended service period, even under high humidity conditions. Polypropylene media is much more puncture resistant than glass paper and is resistant to most chemicals. The Mini Pleat is light weight and can be totally incinerated.

Prices and specifications are subject to change without notice. All sales are made subject to the terms and conditions contained in the Filtera, Statement of Business Policy, as revised from time to time, a current copy of which is available upon request.